




# ROCKERZ PLUS 440

## SMART GUIDE

### PACKAGE CONTENTS





### PRODUCT LABELLING

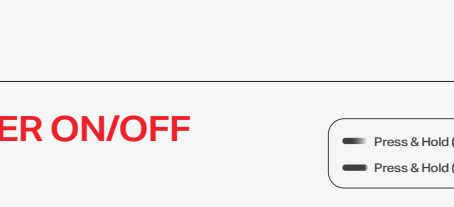

### POWER ON/OFF

- Press & Hold (2 Sec)
- Press & Hold (4 Sec)

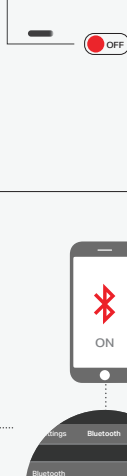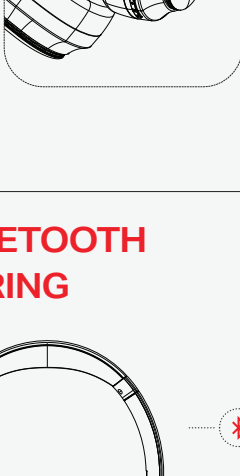

### BLUETOOTH PAIRING




Choose "Rockerz Plus 440" to Connect



### FUNCTIONS (CALL/MUSIC/VOLUME)

- Short Press
- Double Press
- Press & Hold (1s)
- Press in Steps


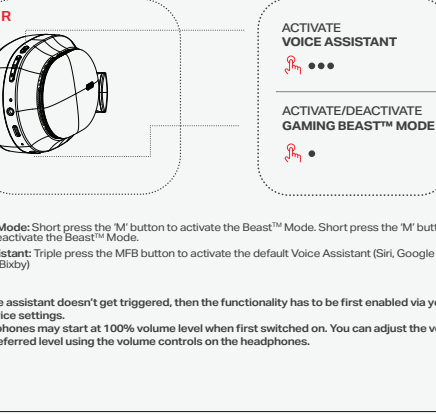


Note: The headphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the headphones.



### FUNCTIONS (BEAST™ MODE/VOICE ASSISTANT)

- Triple Press
- Short Press

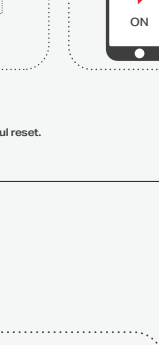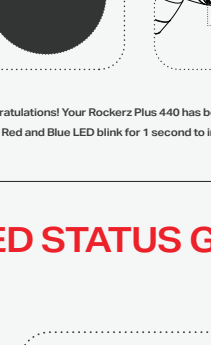

**BEAST™ Mode:** Short press the 'M' button to activate the Beast™ Mode. Short press the 'M' button again to deactivate the Beast™ Mode.  
**Voice Assistant:** Triple press the MFB button to activate the default Voice Assistant (Siri, Google Assistant, Bixby)

Note:  
• If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.  
• The headphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the headphones.




### RESET ROCKERZ

- Long Press (4 sec)

#### FORGET DEVICE



PRESS AND HOLD THE VOLUME (+) AND VOLUME (-) BUTTONS SIMULTANEOUSLY FOR 4 SECONDS TO CLEAR THE LIST OF PAIRED DEVICES.

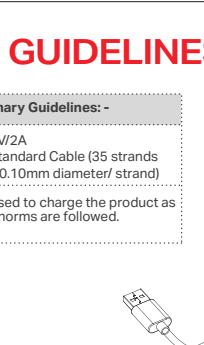

#### PERFORM FRESH CONNECTION



Congratulations! Your Rockerz Plus 440 has been reset.

Note: Red and Blue LED blink for 1 second to indicate a successful reset.



### LED STATUS GUIDE

|                            |               |
|----------------------------|---------------|
| <20% :<br>BLINKING RED LED | LOW BATTERY   |
| SOLID RED LED              | CHARGING      |
| 100% :<br>SOLID BLUE LED   | FULLY CHARGED |



 
### CHARGING GUIDELINES

| Charging norms & Precautionary Guidelines: - |                                                      |
|----------------------------------------------|------------------------------------------------------|
| 1) Charger/Brick/Adapter                     | 5V/2A                                                |
| 2) Cable/Wire                                | Standard Cable (35 strands @0.10mm diameter/ strand) |

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.



Note:  
1. Before using the headphones for the first time, it is recommended to fully charge them.  
2. Please note that the headphones cannot be used / switched on while charging.  
3. This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



### CONNECT TO boAt HEARABLES APP



boAt Hearables App

### LEARN MORE ABOUT YOUR PRODUCT



Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information