

STONE 110



USER MANUAL

Note:

- Please note that you cannot answer calls or operate the corresponding functions on your phone through the speaker in AUX mode.
- In AUX mode, it is necessary to carry out the operation directly from the connected external device.

TWS FUNCTION

Turn on the two Stone 110 speakers that you require to be forged into one, both in Bluetooth mode.

- You need to set only one of the two units and follow the steps below.
- Press and hold the **Q** button on one of the speakers for 2 seconds until you hear a beep.
- Release the **Q** button and wait for a few seconds for the two speakers to connect.
- Enable Bluetooth on your mobile phone and search for "Stone 110" to pair.
- Select "Stone 110" to play music through the two paired speakers.
- To exit the TWS mode, long press the **Q** button on one speaker for 2 seconds.

RESET FUNCTIONALITY

Perform the reset function if the speaker doesn't turn off or doesn't respond properly.

Step: Use a pointed object to prick the reset button in the AUX port for 8 seconds & revert the speaker to its default settings. The Bluetooth connection history of the speaker will be cleared and go back to the default settings.

STONE 110

Thank you for purchasing boAt Stone 110.

You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via wireless Bluetooth v5.4 technology or AUX mode. This portable speaker has been designed with a smooth interface that requires minimum efforts.

Package Contains:

- 1x boAt Stone 110
- 1x USB Type-C Charging Cable
- 1x User Manual

CHARGING

- When the battery is low, the speaker will make a beep sound once every 5 minutes. After 3 such indications, the speaker will automatically switch OFF.
- Insert the provided charging cable to charge the speaker.
- When the speaker is in charging mode, the LED remains solid red. The LED indicator turns off once the speaker is fully charged.

Note:

- Please avoid using the speaker while it is charging, as this may decrease the battery's performance.


CHARGING NORMS & GUIDELINES

Charger/Brick/Adapter	5V/0.5 A
Cable/Wire	Standard Cable (35 strands @0.10mm diameter/strand)

Note:

- Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

PRODUCT OVERVIEW:

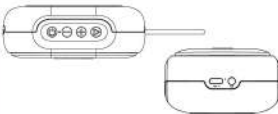

POWER ON/OFF

Press and hold the **Q** button for 3 seconds to switch on/off the speaker.

BLUETOOTH CONNECTION

- Long press the power button **Q** for 3 seconds to switch on the speaker. The speaker enters Bluetooth pairing mode automatically with rapidly blinking white LED to indicate the same.
- Activate the Bluetooth on your smartphone and search for "Stone 110" to connect.
- Select "Stone 110" from the list of available devices.

Congratulations! Stone 110 speaker is now connected to your phone via Bluetooth indicated by a tone prompt.

- Double press the **Q** button to disconnect the current connected media device.
- Double press the **Q** button again to reconnect the speaker with the previously paired device.

SPECIFICATIONS

Product Type	Portable Wireless Speaker
Bluetooth Version	V5.4
Bluetooth Profiles	A2DP,AVRCP,TPAVD,TPAVRCPI, HFP,SRP,LMP,ATT,USAP,GATT, RRCOMMS,SDP,L2CAP profile
Working Range	10m
Driver Size	2"
Compatibility	BT V5.4/AUX
TWS Function	Yes
Frequency	20Hz-20kHz
Signal to Noise Ratio	78dB
Input Voltage	5 V/0.5 A
Output Power	2W
Playing Time	Up to 15 hours (At 80% volume)
Charging Time	Up to 13 hours
Battery Capacity	600mAh
Water Resistance	IPX4

*Playtime may vary accordingly to the music type & the volume level

Note:

- Stone 110 remembers previously connected devices; once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "Stone 110" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

BASIC FUNCTIONS

Power ON/OFF	Long press the Q button for 3 seconds to switch the speaker ON/OFF
Switch Modes	Short press the Q button to switch between connectivity modes (Bluetooth/AUX)
Play/Pause Music	Short press the Q button to play/pause the track
Previous Track	Long press the Q button for 2 seconds to return to the previous track
Next Track	Long press the Q button for 2 seconds to skip to the next track
Increase Volume	Short press the Q button in steps for increasing the volume
Decrease Volume	Short press the Q button in steps for decreasing the volume
Answer Incoming Calls	Short press the Q button to accept an incoming call
Hang Up Calls	Short press the Q button to end an ongoing call
Reject Incoming Calls	Long press the Q button for 2 seconds to reject an incoming call

WARNINGS

- Please charge the speaker according to the charging norms mentioned to protect the battery.
- Please do not disassemble, repair, or modify this product by yourself without authorization.
- Please do not submerge the product in water.
- Please keep this product safe from coming in contact with liquids.
- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to extreme temperatures.
- Please keep this product away from heat sources, such as radiators, stoves, etc.
- When cleaning this product, please use a soft cloth or slightly damp cloth if necessary. Please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.

Radial	Quickly press the Q button 3 times to call back the last dialed contact number
Voice Assistant	Press the Q button 2 times to activate the default smart voice assistant
Activate/ Deactivate TWS Mode	Long press the Q button on one speaker for 2 seconds to pair and unpair two speakers using TWS.
Disconnect / Reconnect Media Device	Double press the Q button to disconnect the current connected media device. Double press the Q button again to reconnect the speaker with the previously paired device.
Reset	Use a pointed object to prick the reset button in the AUX port for 8 seconds, the Bluetooth connection history of the speaker will be cleared and go back to the default settings.

OPERATING INSTRUCTIONS

SWITCH CONNECTIVITY MODES

Short press the **Q** button on the speaker multiple times to switch between Bluetooth and AUX connectivity modes.

Note: Modes need to be changed manually. You need to press the **Q** button every time you want to change the mode.

AUX MODE

- Connect one end of the appropriate cable to the 3.5 mm AUX input of the speaker and the other end to the external device.
- Short press the **Q** button to switch to AUX connectivity mode.
- In AUX mode, you can control the audio playback via the media device/phone.

