

STONE 208



USER MANUAL

boAt STONE 208


Thank you for purchasing boAt Stone 208.

You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via wireless Bluetooth technology and TF card compatibility. This portable speaker has been designed with a smooth interface that requires minimum efforts.

Package Contains:

- 1x boAt Stone 208
- 1x USB Type-C Charging Cable
- 1x User Manual

PRODUCT OVERVIEW:

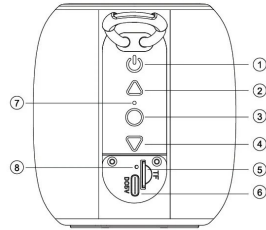

1. Power On/Power Off/Connectivity Mode/Pair/Unpair /Reset Button
2. Volume +/-/Next Track/LED On/LED Off/LED Mode Button
3. Play/Pause/Voice Assistant/Receive Call/End Call /Reject Call/Redial/TWS
4. Volume +/-/Previous Track
5. TF Card/microSD Card Input
6. DC 5V/1A Charging Input
7. Mic
8. Bluetooth/Charging LED Indicator

POWER ON/OFF

Long press the power button for more than 2 seconds to switch the speaker ON and OFF.

Note: The speaker will automatically enter Standby mode if left idle for about 20 minutes.

BLUETOOTH FUNCTION

Stone 208 supports music playback via wireless connection to a smartphone or other compatible devices.

Note: *Compatibility with all commercially available devices cannot be guaranteed.*

BLUETOOTH PAIRING

- Long press the power button for more than 2 seconds to switch on the speaker.
- The speaker enters Bluetooth pairing mode automatically with quickly flashing blue LED to indicate the same.
- Activate the Bluetooth on your smartphone and search for "Stone 208" to connect.
- Select "Stone 208" from the list of available devices. If prompted for a passkey, enter "0000".

Congratulations! Stone 208 speaker is now connected to your phone via Bluetooth indicated by a tone prompt.

Note:

- Stone 208 remembers previously connected devices; once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "Stone 208" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

BASIC FUNCTIONS

Power ON/OFF	Press and hold the button for more than 2 seconds to switch the speaker ON/OFF
Switch Modes	Short press the Power button 1 time to change the connectivity mode (BT/TF Card)
LED ON/OFF	Press the button 3 times to switch on/off LED effect
Change LED Mode	Press the button 2 times to change the LED mode among 6 different effects.
Increase Volume	Short press the button in steps to increase the volume
Decrease Volume	Short press the button in steps to decrease the volume
Play/Pause Music	Short press the Mode button to play/pause the track
Next Track	Press and hold the button for more than 2 seconds to skip to the next track
Previous Track	Press and hold the button for more than 2 seconds to return to the previous track

Answer Incoming Calls	Short press the Mode button to answer an incoming call; Long press the Mode button for 2 seconds to switch the call from the speaker to your phone ongoing calls
Hang Up Calls	Short press the Mode button to end ongoing calls
Reject Incoming Calls	Long press the Mode button for 2 seconds to reject an incoming call
Redial	Press the Mode button 3 times to redial the last contacted number
Activate/DeactivateTWS Mode	Press and hold the Mode button for 2 seconds to activate/deactivate TWS mode
Voice Assistant	Double press the Mode button to activate the default voice assistant (Google voice assistant/Siri)
Disconnect/Reconnect Media Device	Double press the button to disconnect the current connected device. Double press the button again to reconnect the speaker with the previously paired device.

OPERATING INSTRUCTIONS

SWITCH CONNECTIVITY MODES

Short press the Power button on the speaker 1 time to switch between Bluetooth/TF connectivity modes.

Note: Modes need to be changed manually. You need to press the Power button every time you want to change the mode.

LED EFFECT SELECTION

- After turning on the speaker, double press the 'LED Mode' button to change the LED among 6 different light effects.

- Triple press the 'LED Mode' button to turn on/off the light effect.

Note: Stone 208 remembers the last activated LED effect when you turn on the speaker again. If you turn off the LED effect before switching off speaker, you need to press the button 3 times to turn on the light effect when you power on the speaker again.

TWS FUNCTION

If you have two Stone 208 speakers, you can activate the TWS function which allows you to pair the two speakers together and obtain stereo audio reproduction (the speakers will reproduce the same audio at the same time).

Note: In order to use the TWS function, the two speakers must have a maximum distance of about 5 meters from each other in open spaces.

ACTIVATING TWS FUNCTION

- Make sure the speakers are not paired with any external devices.
- Turn on the two speakers and select Bluetooth mode; the LED will flash quickly to indicate the same.
- Long press the Mode button on one speaker for 2 seconds to enter the TWS mode.

- Enable Bluetooth on your mobile phone and search for "Stone 208" to pair.
- Select "Stone 208" to play music through the two paired speakers.
- Once TWS is activated, the speakers will automatically pair with each other if turned on at the same time.
- To deactivate the TWS function and unpair the speakers, long press the Mode button on the speaker for 2 seconds after pairing.

TF CARD MODE

- Long press the power button for more than 2 seconds to switch on the speaker.
- Insert a TF/microSD card (containing songs in MP3 format) into the TF card slot and it will switch to TF card mode automatically.
- Alternatively, short press the Power button multiple times to switch to TF mode.
- Short press the Mode button to pause/resume playback.
- Press and hold and buttons for 2 seconds to go to the next track or return to the previous track.
- Short press the and buttons on the speaker to adjust the volume.

Note: *Compatibility with all commercially available storage devices cannot be guaranteed.*

HANDSFREE CALLING

- Under Bluetooth connection status, if there is an incoming call, short press the Mode button to accept the call and long press the Mode button for about 2 seconds to reject the call.

- Short press the Mode button to end an ongoing call.
- Press the Mode button 3 times to redial the last contacted number
- Long press the Mode button for 2 seconds to switch an ongoing call to your mobile phone.

RESET FUNCTIONALITY

Perform the reset function if the speaker doesn't turn off or doesn't respond properly.
Step: Press and hold the power button for 8 seconds to power off Stone 208 forcibly. Alternatively, you can press the Power button 3 times to clear the Bluetooth connection history of the speaker and revert it to the default settings.

CHARGING

- Stone 208 has a built-in rechargeable battery that can be recharged using the mentioned specifications for the power supply. Before use, it is recommended to fully charge the battery.
- When the battery is low, the speaker will make a beep sound. After 2 such indications, the speaker will automatically switch OFF.
- Insert the provided charging cable to charge the speaker.
- When the speaker is in charging mode, the red LED remains solid on (the speaker will fully recharge in about 2 hours). The red LED turns off once the speaker is fully charged.

Note:

- Please avoid using the speaker while it is charging, as this may decrease the battery's performance.

CHARGING NORMS & GUIDELINES

Charger/Brick/Adapter	5V/1 A
Cable/Wire	Standard Cable (35 strands @0.10mm diameter/strand)

Note:

- Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

SPECIFICATIONS

Product Type	Portable Wireless Speaker
Bluetooth Version	v5.3
Bluetooth Profiles	A2DP, HFP
Working Range	10m
Driver Size	52mm
Compatibility	BT/TF
TWS Function	Yes
Frequency	100Hz-18kHz
Signal to Noise Ratio	≥80%
Input Voltage	3.7V
Output Power	5W
Playing Time*	Up to 8 hours (At 60% volume)
Talk Time	Upto 20 hours
Standby Time	20 hours
Charging Time	1.5 to 2 hours
Battery Capacity	1200mAh
Water Resistance	IPX5

*Playtime may vary accordingly to the music type & the volume level

WARNINGS

- Please charge the speaker according to the charging norms mentioned to protect the battery.
- Please do not disassemble, repair, or modify this product by yourself without authorization.
- Please do not submerge the product in water.
- Please keep this product safe from coming in contact with liquids.
- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to extreme temperatures.
- Please keep this product away from heat sources, such as radiators, stoves, etc.
- When cleaning this product, please use a soft cloth or slightly damp cloth if necessary. Please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.