

SLAZER S100



USER MANUAL

boat SLAZER S100

Thank you for choosing the boAt Slazer S100 Trimmer. With up to 300 minutes of runtime, a 1200 mAh rechargeable battery, and self-sharpening stainless-steel blades, it has everything you need to stay on top of your manly rituals. To help you get started, this manual will walk you through the features, usage, and maintenance of your Slazer S100. Read it thoroughly before first use to ensure a smooth sail. You can always refer back to these instructions whenever needed.




CONTENTS -

Gently unbox your Slazer S100 and verify that you have all the items mentioned in the table below. The x with the number indicates the quantity of the component.

- | | |
|---------------------------------------|------------------------|
| 1 UNIT Trimmer with Detachable Blade | 1 UNIT Adjustable Comb |
| 1 UNIT Type-C Charging Cable | 1 UNIT Cleaning Brush |
| 1 UNIT User Manual & Warranty QR Card | |

PRODUCT OVERVIEW -


- 1) Trimmer Head
- 2) Comb Disassemble Button
- 3) Power On/Off Button
- 4) LED Indicator Light
- 5) Comb (0-11 mm)
- 6) Rotating Lock Buckle
- 7) Comb Adjustment Knob
- 8) Cleaning Brush
- 9) Type-C Charging Cable

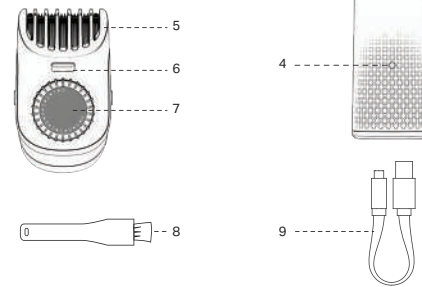

POWER ON/OFF

- **Power On:** Slide the power button upward to turn ON. The LED indicator light will glow white when the device is switched ON.
- **Power Off:** Slide it downward to turn OFF.

Note: Ensure the device is switched OFF before attaching or removing the comb or blade.

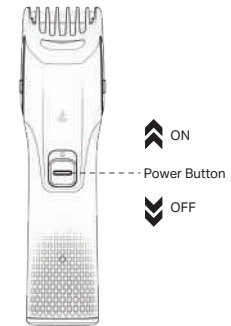

LED INDICATOR FUNCTION

- **Red:** The LED indicator light glows red while charging.
- **White:** The White LED indicator glows continuously while the trimmer is in use and remains lit when the battery is fully charged.


TRIMMER CUTTING HEAD

The trimmer's cutting head is engineered to deliver 0.5 mm precision trimming, allowing precise grooming results.

Front

Removing the Blade Head

Hold the trimmer body firmly and gently push the blade head outward in the indicated direction to detach it from the unit. Carefully lift it away from the unit. Do not force removal.

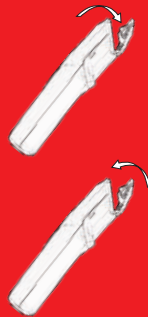

Installing the Blade Head

Align the blade assembly correctly with the mounting slot and push it in the indicated direction until you hear a "click" sound. The click confirms that the blade head is securely locked in place. Ensure it is properly fixed before use.

Note: Do not attempt to remove or install the blade while the device is powered ON. Ensure the blade is aligned evenly on both sides before pressing into place.

Ensure hands are dry before handling the blade assembly.

Removing the Comb:

Hold the trimmer body firmly. Press the comb disassemble button and lift/pull the comb away from the cutting head to detach it. Store the comb safely to avoid bending the teeth.



Comb Adjustment Knob

With the comb attached, rotate the comb adjustment knob to set the desired trimming length of 0-11 mm.

Turn gradually and confirm the selected length before use. For consistent results, avoid changing the knob setting while trimming.

Note: Ensure the trimmer is switched OFF while attempting to remove or install the comb.



CHARGING INSTRUCTIONS

1. Connect the Type-C cable to the charging port.
2. Plug the USB end into a suitable power source.
3. The LED indicator will illuminate during charging.
4. Do not charge continuously for extended periods.
5. Disconnect after a full charge.

Charging norms & Precautionary Guidelines: -

- Charge the trimmer fully before first use.
 - Use a 5V = 1A USB power adapter.
- Note: Unplug the adapter when the trimmer is in use.*

CARE & MAINTENANCE

Cleaning the Blades

- Switch OFF the device before cleaning. Do not clean it while charging.
- Remove the trimming comb and blade head, and use the provided cleaning brush to clean out the blade head slot and blade teeth.
- The blade cutting head and trimming comb can be rinsed with water. All components should be dried immediately after rinsing.
- Water on or near the charging port should be dried before storing the device.

Oiling the Blades

- Ensure the blades are clean and free of debris.
- Apply 2 drops of blade oil to the left, middle and right of the trimmer teeth. Only use the light-grade lubricant/cleaning oil for cleaning the blades.
- Turn ON the trimmer and expose the cutting blades.
- Allow the trimmer to run for up to 10 seconds so the oil spreads evenly.
- Turn OFF the trimmer and wipe away excess oil.
- Do not use compressed gas, steel wool, abrasive cleaning agents, corrosive liquids (such as gasoline or acetone), or sharp objects to clean this trimmer.
- Keep blade cleaning oil away from children.

PRODUCT SPECIFICATION

Device	Slazer S100
Body Area	Face & Body
Blade Material	Stainless Steel
Self-Sharpening Blades	Yes
Precision steps	Control up to 0.5 mm
Battery Type	Lithium Battery
Battery Capacity	18650 – 1200mAh
Charging Time	Up to 150 minutes
Run Time	Up to 300 minutes
Charging Type	Type-C port

WEEE INFORMATION

This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment

Disclaimer: Features may vary by product model. For detailed specifications, please refer to the product user guide. Due to ongoing improvements, specifications are subject to change without prior notice. We continuously enhance our products to ensure the highest quality.

SAFETY INSTRUCTIONS & PRECAUTIONS

To ensure safe use and prolong the life of your boAt Slazer S100, please follow these safety and precautionary guidelines:

- Make sure the trimmer's charging port is completely dry before connecting the adapter.
- Do not wrap the charging cable around the trimmer to avoid damage to the cable.
- The trimmer's cutting head needs to be correctly installed before use. Only install, remove or adjust the trimming comb and blade head while the trimmer is turned off.
- The trimmer needs to be turned off and unplugged while cleaning.
- Do not press the blade teeth into the skin to prevent injuries.
- Fully charge the trimmer at least once every six months, if it has not been used for a long time. It is normal for the blade to become warm during use.
- People (including children) who lack the relevant experience and knowledge, or capacity for civil conduct may not use, clean or maintain the device without adult supervision and guidance.

FREQUENTLY ASKED QUESTIONS (FAQS)

1. The trimmer is not turning ON.

Ensure the device is fully charged. Connect the Type-C charging cable and charge the trimmer for the recommended time. Check the charging source and cable connection.

2. The trimmer is not charging.

Check that the charging cable is properly connected to both the trimmer and the power source. Ensure the adapter or USB source is functioning correctly.

3. Reduced trimming performance.

Clean the cutting head using the cleaning brush to remove any trapped hair. For improved performance, you may apply 2-3 drops of light trimmer oil (such as light mineral-based clipper oil) to the blades after cleaning. Ensure the blade head is properly installed before use.

WARRANTY

The boAt Slazer S100 comes with 24 months of domestic warranty from the date of purchase.

For warranty support, visit <https://support.boat-lifestyle.com/>.

Back

DETACHABLE COMB & ADJUSTMENT KNOB USE

Installing the comb:

Align the comb with the cutting head. Slide the comb gently into place until it sits firmly and you hear a "click" sound, indicating that the comb is securely attached. Ensure the comb does not wobble before trimming.

