

# SLAZER K100 PRO

15-in-1 Grooming Kit for Face, Head & Body



boat

## SLAZER K100 PRO

Thank you for choosing boAt Slazer K100 Pro 15-in-1 Grooming Kit.

With up to 200 minutes of runtime, a 1200 mAh rechargeable battery, and self-sharpening blades, it has everything you need to stay on top of your manly rituals. To help you get started, this manual will walk you through the features, usage, and maintenance of your Slazer K100 Pro. Read it thoroughly before first use to ensure a smooth sail. You can always refer back to these instructions whenever needed.



### USER MANUAL

### CONTENTS

Gently unbox your Slazer K100 Pro 15-in-1 grooming kit and verify that you have all the items mentioned in the table below.

- 1 UNIT Trimmer Body with detachable T-Blade Head
- 1 UNIT U-Blade Head
- 1 UNIT Precision Trimming Head
- 1 UNIT Foil Shaver Head
- 1 UNIT Nose/Ear Head
- 1 UNIT Body Trimmer Head
- 8 UNITS Detachable Comb Attachments
- 1 UNIT Type-C Charging Cable
- 1 UNIT Cleaning Brush
- 1 UNIT Cleaning Oil
- 1 UNIT Charging Dock
- 1 UNIT User Manual & Warranty QR Card



### HOW TO USE

#### TURNING ON/OFF

Press the power button once to turn the trimmer ON. Press again to turn it OFF.

- Note:**
- When fully charged, the trimmer provides up to 200 minutes of usage (may vary with use).
  - If the trimmer is not used for a long period, fully charge it at least once every six months to maintain battery health.

#### DISPLAY FUNCTION

The digital display indicates the trimmer's operational status, including:

- Power ON / OFF status
- Charging status/Power left
- Travel Lock status

#### CHARGING THE TRIMMER

##### CHARGING VIA TYPE-C CABLE

- Ensure the trimmer is switched OFF before charging.
- Connect the Type-C cable directly to the charging port on the trimmer.
- Plug the other end into a 5V USB power adapter.
- The display will indicate charging and battery status.



### CHARGING VIA CHARGING DOCK

- Place the trimmer securely onto the charging dock, ensuring proper alignment with the charging contacts.
- Connect the Type-C cable to the charging dock.
- Plug the other end of the cable into a 5V USB power adapter.
- The digital display of the trimmer will indicate the charging and battery status.

- Note:**
- Do not charge in wet conditions.
  - Dry charging pins before docking.



#### TRAVEL LOCK FUNCTION

- The travel lock prevents accidental power-on during travel or storage. To activate/deactivate the travel lock, press and hold the power button for up to 3 seconds until the lock indicator appears/disappears on the display.
- Note:** The trimmer cannot be turned ON while Travel Lock is active.

### SLAZER K100 PRO PARTS & ACCESSORIES

#### Trimmer Heads & Recommended Use

The boAt Slazer K100 Pro comes with multiple interchangeable trimmer heads; each designed for specific trimming needs. Select the right trimmer head based on the area to be trimmed and your desired styling outcome.

**Installing the Trimmer Head:** Align the trimmer head with the top of the trimmer body and place it in position. It will snap into place magnetically. Ensure it is securely attached before use.

**Removing the Trimmer Head:** Switch OFF the trimmer before removing the head. Hold the trimmer body firmly and gently pull the trimmer head upwards to detach it. Do not twist. Reattach another head as needed.

#### U-Blade Head

Suitable for defining beard lines, jawlines, sideburns, & touch-ups around contours.



#### T-Blade Trimming Head

Ideal for beard, moustache, and general body hair trimming.



#### Foil Shaver Head with Blade

Provides a closer trim similar to shaving. The combination of two outer blades and a central foil shaver helps achieve a smooth & even finish.



Front

#### Nose & Ear Trimmer Head

Designed for safe removal of unwanted hair from the nose and ears.



#### Precision Trimming Head

Suitable for precise detailing and a refined finish. Ideal for shaping moustache lines, defining sideburns, refining jawlines, and trimming around the chin and neckline.



#### Body Trimmer Attachment Head

Suitable for trimming body hair on the chest, underarms, legs, and other larger body areas. Offers controlled performance for safe and even trimming. **Note:** In the Body Trimmer Attachment, the lower blade remains static, while the upper blade moves to cut hair during operation.



#### Detachable Combs & Recommended Use

The boAt Slazer K100 Pro comes with 8 comb attachments designed for different trimming needs. Choose the comb based on your preferred hair length and area of use.

**Installing the comb:** Align the comb attachment with the blade head. Gently press the comb into place until it fits securely.

**Removing the comb:** Switch OFF the trimmer before removing the comb. Hold the comb firmly from both sides and gently pull it away from the blade head.

**Note:** Always ensure the comb is securely attached before use to avoid uneven trimming. For close trimming, remove the comb and use the blade directly (up to 0.5 mm precision).

#### 1-6 mm (T-Blade Comb)

- Ideal for short trims, stubble styling, and precision detailing.
- Use with the T-Blade head for accurate length



#### 7-12 mm (T-Blade Comb)

- Suitable for longer beard styles and maintaining fuller looks.
- Use with the T-Blade head to achieve even, controlled results.



#### 3 mm & 5 mm (Body Grooming Combs)

- Designed for gentle trimming in sensitive body areas, offering enhanced skin comfort and control.
- Use with the Body Groomer Head (Foil Shaver) for best results.



#### 3 mm, 5 mm, & 7 mm (Jawline Combs)

- Perfect for contouring jawlines, edges, and maintaining a sharp, well-shaped beard.
- Use with the U-Blade Head for accurate length control.



#### Body Trimmer Comb

- Recommended for controlled trimming across chest, underarms, and other body areas.
- Use with the Body Trimmer Attachment Head for best results.



### CARE & MAINTENANCE

#### Cleaning the Blades

- Switch OFF the device before cleaning. Do not clean it on charging.
- Remove the trimming comb and blade head and use the provided cleaning brush to clean out the blade head slot and blade teeth.
- The trimming comb, blade head, trimmer, and trimming comb slot can be rinsed with water. All components should be dried immediately after rinsing.
- Water on or near the charging port should be dried before storing the device.



#### Oiling the Blades

- Only use the light grade oil supplied with the package for cleaning the blades.
- Ensure the blades are clean and free of debris.
- Apply 2 drops of blade oil to the left, middle and right of the trimmer teeth.
- Turn ON the trimmer and expose the cutting blades.
- Allow the trimmer to run for 10 seconds so the oil spreads evenly.
- Turn OFF the trimmer and wipe away excess oil.
- Do not use compressed gas, steel wool, abrasive cleaning agents, corrosive liquids (such as gasoline or acetone), or sharp objects to clean this trimmer.
- The trimmer is water-resistant (IPX6) and suitable for rinsing under running water. Do not use while bathing or showering.
- Keep blade oil away from children.



### PRODUCT SPECIFICATION

Device	Slazer K100 Pro
Body Area	Face, Hair, & Body
Blade Material	Stainless Steel + Ceramic
Self-Sharpening Blades	Yes
Number of Blades	6
Number of Combs	8
Precision steps	Control up to 0.5 mm
Battery Type	Lithium Battery
Battery Capacity	18650 – 1200mAh
Charging Time	Up to 120 minutes
Run Time	Up to 200 minutes
Charging Type	Type-C port with Charging Dock and can also be used with Adapter.
Display Type	Digital
Travel Lock	Yes
Water Resistance	IPX6

#### Charging norms & Precautionary Guidelines: -

- Charge the trimmer fully before first use.
- Use a 5V = 1A USB power adapter.

**Note:** Unplug the adapter when the trimmer is in use.

### SAFETY INSTRUCTIONS & PRECAUTIONS

To ensure safe use and prolong the life of your boAt Slazer K100 Pro, please follow these safety and precautionary guidelines:

- Make sure the trimmer's charging pins are completely dry before connecting the adapter.
- Do not wrap the charging cable around the trimmer to avoid damage to the cable.
- The blade head needs to be correctly installed before use. Only install, remove or adjust the trimming comb and blade head while the trimmer is turned off.
- The trimmer needs to be turned off and unplugged while cleaning.
- Do not press the blade teeth into the skin to prevent injuries.
- Fully charge the trimmer at least once every six months, if it has not been used for a long time. It is normal for the blade to become warm during use.
- People (including children) who lack the relevant experience and knowledge, or capacity for civil conduct may not use, clean, or maintain the device without adult supervision and guidance.

### WEEE INFORMATION

This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment

#### Disclaimer:

Features may vary by product model. For detailed specifications, please refer to the product user guide. Due to ongoing improvements, specifications are subject to change without prior notice. We continuously enhance our products to ensure the highest quality.

### FREQUENTLY ASKED QUESTIONS (FAQS)

#### 1. The trimmer is not turning ON.

Check if the travel lock is disabled. Press and hold the power button for 3 seconds to disable the travel lock. Check if battery is depleted.

#### 2. The trimmer is not charging.

Ensure the charging cable is properly connected to the trimmer. Try a different power adapter or power source.

#### 3. Reduced trimming performance.

Clean and oil the blades regularly for optimal trimmer performance.

#### 4. The trimmer is not charging when placed on the charging dock.

**What should I do?** If charging via the dock fails, try charging the trimmer directly using the Type-C charging cable. Also ensure the charging contacts are clean and properly aligned.

### WARRANTY

The boAt Slazer K100 Pro comes with 24 months domestic warranty from the date of purchase. For warranty support, visit <https://support.boat-lifestyle.com/>.

Back