



### CHARGE THE CASE:

Step 1: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer wall adapter/powerbank, etc. While charging, the Case LED continuously blinks in white. When the case gets fully charged, solid white LED turns on to indicate a 100% battery level.

| Case Remaining Battery | LED Indication                                                             |
|------------------------|----------------------------------------------------------------------------|
| Less than 30%          | White LED quickly blinks for 5sec when case lid gets opened/closed         |
| 30%-70%                | When LED normally blinks 3 times when the Case lid is opened/closed        |
| More than 70%          | When LED stays Solid On for 3 seconds when the Case lid gets opened/closed |

Case LED Indication about inserting earbud into the case - This is to indicate - WS is charging from the case when lid gets closed Earbuds charging status will be shown after Case charge status.

- WHITE LED is Solid On for 5 seconds
- WHITE LED is OFF when Earbuds are charged fully

### BASIC FUNCTIONS

- Ambient Mode, ANC and Normal Modes: Long touch the right CTC for 3 seconds to switch among Ambient mode, ANC mode and Normal mode for music. Ambient mode is for transparency towards the audible surroundings. By virtue of ANC mode you can cancel out the external noise and let yourself fully immerse in your playlist.

Get ready to immerse yourself in musical bliss with your very own pair of boat Airdopes 141 Elite ANC. Please consider this manual as your guiding map towards the unparalleled shores of musical Bliss. Knowledge of Bluetooth and device connectivity is essential for steering the boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times whenever you face any sort of difficulty.

### BEAST™ MODE

Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

### ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work spaces literally anywhere!

### PACKAGE CONTENTS

- 1x Pair of TWS Earbuds
- 1x Type-C Charging Cable
- 1x Charging Case
- 1x User Manual
- 2x Pairs of Additional Earbuds

### OVERVIEW

- CTC (Capacitive Touch Control) / Power Button
- Reset Button

### POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our (NPM) (Noise Wake N Tap) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode.

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds.

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode indicated by blue and red LED flashes.

### CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan.

Step 4: Search for 'Airdopes 141 Elite ANC' and pair accordingly.

Congratulations! Your earbuds are now successfully connected via Bluetooth.

Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above-mentioned procedure.
- Airdopes 141 Elite ANC remembers previously connected devices once switched on and within optimum range, the ear-buds automatically reconnect to the previously connected devices.

### SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud.

Step 2: The selected earbud will automatically enter the connection mode.

Step 3: Turn on Bluetooth on your phone/media device and search for Airdopes 141 Elite ANC to connect.

Note:

- To switch to Stereo mode, simply take out the other earbud from the case, it will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.

### QUICK GLANCE ON FUNCTIONALITIES

3 Seconds: Long touch both CTCs for 3 sec to manually power on

3 Seconds Right Earbud: Long touch the right CTC for 3 seconds to toggle between ANC OFF/ Ambient/ ANC ON modes

3 Seconds Left Earbud: Long touch the left CTC for 3 seconds to toggle between boat Signature Sound/ Bass-boost Mode

7 Seconds: Long touch both CTCs for 7 sec to manually power off

10 Seconds: Long press the Reset Button on case for 10 sec to perform factory reset. Case & Earbud LED blinks 5 times to confirm reset

### CHARGING THE EARBUDS

Step: Please insert the earbuds back inside the charging case in correct orientation.

| Remaining Earbuds Battery | LED Indication                                            |
|---------------------------|-----------------------------------------------------------|
| Low Battery               | RED light blinks 3 times when the Case lid gets opened    |
| Min 30%-100%              | (BLUE) light blinks 3 times when the Case lid gets opened |

Note:

- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging.

### SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid

Step 3: The earbuds will automatically switch off and enter into charging mode!

### MANUAL POWER OFF

Step 1: Long touch both CTCs for 7 seconds to manually power off the earbuds

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

Step 3: Close the lid and then re-open it again after a few seconds.

Step 4: Perform a fresh connection attempt and enjoy!

Congratulations! Your Airdopes 141 Elite ANC has been Reset.

### FACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 141 Elite ANC

\*NOTE: Before performing reset, close "Airdopes 141 Elite ANC" from pairing device memory by forgetting device.

Step 1: Place the earbuds inside the case.

Step 2: While the earbuds are inside the case, keep the case open & long press the Reset Button for 10 seconds.

After successful factory reset:

- White LED blinks quickly 5 times on the Charging Case
- Red LED blinks quickly 5 times on the Earbuds

Step 3: Close the lid and then re-open it again after a few seconds.

Step 4: Perform a fresh connection attempt and enjoy!

Congratulations! Your Airdopes 141 Elite ANC has been Reset.

### TROUBLESHOOTING

| Potential Problem                                                           | Solution                                                                                                                       |
|-----------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| If one earbud is not working                                                | Perform the Factory Reset.                                                                                                     |
| If earbuds are not in connection/scan mode                                  | Perform the Factory Reset.                                                                                                     |
| If earbuds disconnect during phone call                                     | Charge the earbuds or perform the Factory Reset.                                                                               |
| If there are other exceptions in usage                                      | Place the earbuds back into the charging case and try using them again or perform the Factory Reset.                           |
| If the Touch Controls don't seem to respond                                 | After long usage, residual static and perspiration can affect the touch control area, please use a clean cloth to wipe softly. |
| If the Left & Right Earbuds are registered to each other due to any anomaly | Perform the Factory Reset. Double touch both left & right CTC simultaneously.                                                  |

Charging norms & Precautionary Guidelines:-

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @Ø 15mm diameter) (stranded)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

### SPECIFICATIONS

| Headphone Type            | ANC TWS Earbuds                                                                                                                                         |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bluetooth Version         | V5.3                                                                                                                                                    |
| Water Resistance          | IPX5                                                                                                                                                    |
| WPM Technology            | Yes                                                                                                                                                     |
| ANC                       | FF ANC (Up to 35dB)                                                                                                                                     |
| ENx™ Equipped Microphones | 4                                                                                                                                                       |
| Latency with BEAST™ Mode  | 50ms                                                                                                                                                    |
| Music Playtime            | Up to 6H per charge, Up to 36H additional Case playtime (than ANC model) Up to 5H per charge, Up to 36H additional Case playtime (ANC model) at 60% vol |
| Standby                   | 80h                                                                                                                                                     |
| Charging Technology       | ASAP™ Charge                                                                                                                                            |
| Transmission Range        | 10m                                                                                                                                                     |
| Driver Size               | 10mm*2                                                                                                                                                  |
| Driver Support            | SBC and AAC                                                                                                                                             |
| Frequency                 | 20Hz-20kHz                                                                                                                                              |
| Battery                   | 400mAh (Case) 35mAh*2 (Earbuds)                                                                                                                         |
| Charging Time             | 1.5H                                                                                                                                                    |
| Charging Interface        | Type C                                                                                                                                                  |

### WARNING

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.