

CHROME
IVORY



USER MANUAL

boAt

CHROME IVORY

Thank you for choosing the boAt Chrome Ivory as your fitness transformation companion. Allow this manual to guide you through the functioning of your smartwatch. Please read it thoroughly before using it for a smooth sail. You may refer to these instructions for later use as well.




Package Contains:

- Chrome Ivory x1
- USB Magnetic Charging Cable x1
- User Manual and Warranty QR Card x1

CHARGING THE WATCH


The smartwatch must be charged before initial use. It takes up to 2 hours to be fully charged. Connect and charge the watch with the image below as a reference.

Note: Use a standard 5V/2A charger only.

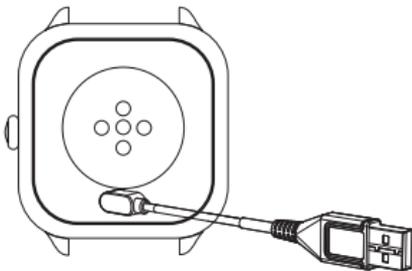

TURNING THE WATCH ON/OFF

- **Power On:** Long-press the Power Button for 3–5 seconds until the screen lights up.
- **Power Off:** Long-press the side button for 3–5 seconds to turn the watch on. Tap the ✓ (Confirm) icon to initiate the power off.

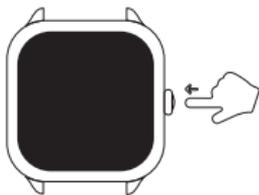

CONNECTING TO THE APP

1. DOWNLOAD THE CREST APP ON YOUR DEVICE

Download the Crest App on your device using the QR card included in the package. The app is available on both:

- App Store (for iOS 14.0 and above)
- Google Play Store (for Android 7.0 and above)

OR

- Scan the QR code of the app provided here to download the app.



2. PAIR YOUR SMARTWATCH WITH YOUR DEVICE

1. Open the boAt Crest app on your device.
2. Ensure the phone's Bluetooth, Notifications and Location functionalities are turned on for the best experience.
3. On the app's home screen, search for and select 'Chrome Ivory'. The app will begin scanning for nearby devices. Once detected, select the smartwatch named CHROMEIVORY_XXXX.
4. As the binding process will begin, you may receive a prompt confirming "Accept Pairing". A pop-up may appear requesting access to your contacts and call logs. Tap "Pair" for a seamless experience.



Note: To ensure connectivity throughout your journey, make sure the app is allowed to always run in the background of your phone.

SYNCING YOUR SMARTWATCH TO THE APP

Data Synchronization

- Open the app on your phone.
- Make sure your Chrome Ivory is connected to the app.
- Synchronization will start automatically once you enter the app interface.

NAVIGATING THROUGH THE FUNCTIONS

MAIN MENU

Short press the side button to open the Main Menu from the Home Screen. Alternatively, swipe right from the Home to open the Main Menu.

Activity

Tap on the Activity for an overview of your daily movement and fitness progress.

This screen shows a visual snapshot of your daily activity progress, including, steps, calories, and exercise. Swipe up on the activity screen to check detailed data:

- Steps: Number of steps taken against your daily step target. Set daily steps target from the Crest app.
- Calories: Displays calories burned versus the target value.
- Exercise: Shows the total duration of exercises versus the target value.
- Hour-wise step activity
- Daily step history for the last 7 days

To view detailed history, sync your watch with the boAt Crest app.

Note: The activity will not be recorded if the total duration is less than 3 minutes.



Sleep

The smartwatch automatically tracks your sleep duration when worn overnight. Tap the Sleep icon to view your Total Sleep Duration, Sleep Time, and Wake-up Time.

Sleep Insights: Swipe up on the Sleep screen to view a detailed breakdown of your 24-Hour Sleep Data duration. View the detailed data on the boAt Crest app.

Note: The smartwatch automatically tracks sleep between 8:00 PM and 10:00 AM. For accurate sleep tracking, the watch must detect that the asleep criteria are met including the minimal wrist movement, specific wrist angle, resting positions, overall inactivity for an extended duration. The watch begins recording sleep only when these criteria are met.



Heart Rate

Tap on the Heart Rate (HR) icon to measure your real-time heart rate. The smartwatch also displays:

- Current Beats Per Minute (BPM)
- Max BPM
- Min BPM

Heart Rate Insights: Swipe up on the HR screen to check 24-hour HR data across different times of the day. View the detailed data on the boAt Crest app.

Note: Measurements are for reference only and not for medical purposes. Ensure the smartwatch is worn securely on your wrist for accurate readings.



Phone Call

Make and manage calls directly from your smartwatch when it is connected to your device via Bluetooth calling.

- **Recent Call:** Find recently received, missed, and dialed call logs under recent call section. Select any entry to call the number directly from the smartwatch.
- **Dial Pad:** Tap on Dial Pad to open the on-screen keypad number. Enter the phone number and tap the call icon to place a call.
- **Contacts:** Tap on Contacts to view your synced contact list. To add a contact, open the boAt crest app > Settings > Watch Features > Bluetooth Calling > Your Synced Contacts. Add up to 8 contacts from the boAt Crest app.

Note: Make sure that call notifications are enabled and your smartwatch is connected to your device via Bluetooth calling.



Exercise

From the Main Menu, tap on Workout to view the list of available exercise modes. Choose from various default exercise modes here, including Walking, Running, Cycling, Skipping, Badminton, Basketball, Football, Climbing, Tennis, Rugby, Golf, Yoga, Fitness, Dancing, Baseball, Elliptical, Indoor Cycling, Free Training, and Rowing Machine. Tap on your preferred exercise to start recording.



Exercise Records

Sync the smartwatch with the app to view detailed exercise records.



SpO2

Tap on the SpO2 icon to check the blood oxygen saturation in percentage. Make sure to wear the smartwatch securely on your wrist. Tap on the screen to begin real-time blood oxygen level tracking. Stay still for the measurement to complete. View your SpO2 reading on the screen and Max/Min SpO2 readings.

SpO2 Details: Swipe up to access detailed SpO2 data of last 7 records.

Note: The measurement is for reference only and not intended for medical use.



Stress

Tap on the Stress icon to check your real-time stress level. During the stress measurement, sit still and ensure the watch is properly worn on your wrist. View your Stress result on the screen once the measurement is complete. Also, displays the Max and Min readings.

Stress Details: Swipe up on the Stress screen to view detailed 24-hour stress data. Swipe up further to view stress level distribution, categorized as: Relaxed (1–29), Normal (30–59, Medium (60–79), High (80–100).

Note: The measurement is for reference only and not intended for medical use.



Weather


Receive real-time updates on weather conditions by connecting to the boAt Crest app.

Note: Your smartwatch will refresh the weather information periodically, keeping you informed throughout the day.



Notifications

Tap on Notifications from the main menu to check all notifications of the connected device. Alternatively, swipe up from the Home screen to check the notifications.

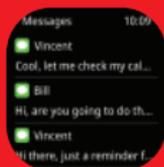

Remote Camera

Tap on the Remote Camera icon to remotely trigger the camera on your paired smartphone.

- Open the Crest app.
- Tap on Remote Camera on your smartwatch to capture a picture.

Note: To use this feature, make sure the smartwatch is connected to the boAt Crest App. The Crest app must remain open for this feature to work properly.



Music

Tap Music to control audio playback on the paired device. Functions include Play/Pause, Next/Previous track, and Volume adjustment.

- **Volume Adjustment:** Tap on speaker icon on the screen for volume adjustment. Then, move the slider up and down to turn up or down the music.
- **Music Control Toggle:** Toggle On/Off to enable or disable music control for the connected device.

Note:

- Ensure your watch is connected to your phone via Bluetooth.
- Some music apps with different control protocols may not be supported.



Voice Assistant

From the Main Menu, tap on Voice Assistant to activate the voice assistant on your paired smartphone. Speak your command clearly to perform tasks.

Note: Ensure the watch is connected to the boAt Crest App.



Timer

Tap on the Timer icon to set a countdown timer. Choose from the preset durations: 1 min, 2 min, 5 min, 10 min, 15 min, 30 min, 1 hour, 2 hours, or set a Custom timer.

Note: The timer will continue running in the background even if you switch screens.



Alarm

Tap the Alarm icon to set and manage alarms on the smartwatch.



Stopwatch

Tap to start the stopwatch. Functions include start, stop, lap, and reset. Select the lap record option to mark lap times while the total stopwatch time continues running.



Female Wellness

Enable and set the details on the boAt Crest app to receive period and ovulation reminders directly on the smartwatch.

Note: This feature is available only if 'Female' is selected as the gender during the initial watch and app setup.



Flashlight

Tap the Flashlight icon to turn the watch screen bright white. Tap on the screen again to turn it off.



Calculator

Access the Calculator from the main menu to perform basic arithmetic operations directly on the smartwatch.



Find Phone

Tap on the Find Phone icon to locate your paired device. Once activated, your device will start ringing or vibrating. Tap on the screen to stop the alert.

Note: Your smartwatch should be connected to your phone via Bluetooth and within its range for this feature to work.




Games

From the Main Menu, tap on Game to play the in-built games: Hamster and 2048




SETTINGS

This menu allows you to adjust watch settings.

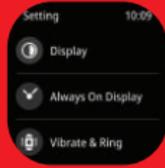

Display

- **Brightness:** Tap on this to adjust the brightness. Alternatively, swipe down from the Home screen and click on the brightness icon.
- **Auto Sleep:** Tap on the auto sleep option to adjust the screen timeout duration. You can set it from 5 to 30 seconds based on your preference. Note: Longer screen time may lead to faster battery consumption.
- **Watch Face:** Choose from 5 default watch faces. Alternatively, long-press on the home screen to view or switch between the default watch faces; select add your preferred watch face.

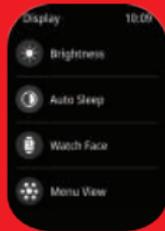

- **Menu View:** Choose your preferred app menu layout from the options: List View, Grid View, Parallel, Surface, Full Moon, Crescent, HelM, and Honeycomb. The selected menu style will be applied instantly to the app menu.

Always on Display

Toggle On or Off the Always on Display feature. Once enabled, choose the display style either Digital Clock or Analog Clock.

Note: If this feature is enabled, the endurance will be reduced.

Ring & Vibration

Manage alert modes and vibration strength on your smartwatch.

Mode: Select your preferred sound control here: Vibration, Ring & Vibration, and Mute.

Intensity: Choose the level of intensity from Strong, and Soft depending on your preference.

Encoder Vibration

Toggle On/Off to turn vibration feedback on or off.

Raise to Wake

Toggle On or Off Raise to Wake gesture here to automatically light up the smartwatch screen when you lift your wrist.

DND Mode

Toggle DND on or off here.

Note: When enabled notifications, calls and messages will be silenced.

Low Power Mode

Toggle on or off, the Low Power Mode also known as Power Saving Mode, here.

Note: Lower power mode turns off the vibrations, raise to wake, and turns down the brightness.


Phone Call

Toggle On or Off the Bluetooth calling feature of the smartwatch.

Note: Once disabled, you will not be able to answer calls from your smartwatch.

Media Audio

Toggle On or Off the Media Audio feature of the smartwatch.

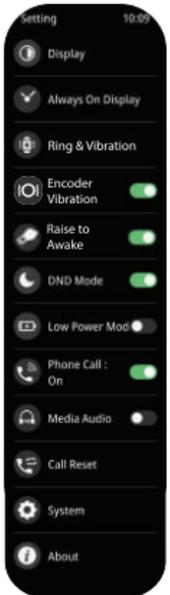

Call Reset

Reset all call-related settings here. Tap the ✓ (Confirm) icon to initiate the call reset.



System

- Restart: Restart the smartwatch. Tap Confirm to restart or cancel to exit.
- Power Off: Turns off the smartwatch. Tap Confirm to power off or cancel to exit.
- Reset: Restores the smartwatch to factory settings. Tap Confirm to reset or cancel to exit. All data on the device will be erased.



About

- Version: Shows the device details. Also, shows Phone, Bluetooth connectivity status and remaining battery.
- App Download: Scan the Crest app QR code here.



Regulatory

- Shows the device regulatory details.



SWIPE RIGHT TO ACCESS MAIN MENU

Swipe right from the Home screen to access the Main Menu.




SWIPE LEFT TO ACCESS WIDGETS

From the Home screen, swipe left to scroll through the widgets: Activity, Sleep, Heart Rate, SpO2, Stress, and Weather.



SWIPE UP TO ACCESS THE NOTIFICATIONS

Swipe up from the Home screen to check notifications of the connected device.

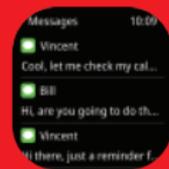

SWIPE DOWN FOR THE SHORTCUT MENU

From the Home Screen, swipe down to access shortcuts such as Do Not Disturb, Power Saving Mode, Brightness, Flashlight, Always on Display and Settings. Also, check Phone Connectivity, BT Connectivity, Battery Level, Date and Day here.



PRODUCT PARAMETERS

Model	Chrome Ivory
Screen Size	1.70" (4.31 cm)
Screen Type	AMOLED
Battery Capacity	210 mAh
Net Weight	20 gm
Bluetooth Version	Bluetooth 5.2
Charging time	Up to 2 Hours
Working time	Up to 5 days (Battery life may vary depending on usage)
Water Resistance	IP68

Maintenance

Regularly clean your wrist and the strap of the smartwatch, especially after sweating during exercise or being exposed to substances such as soap or detergent, which may get stuck on the other end of the product.

Do not wash the strap with a household cleanser. Please use soap-less detergent, rinse thoroughly and wipe with a piece of soft towel or napkin.

For spots or stains that are not easy to remove, scrub the area with rubbing alcohol and then follow the above procedure.

Frequently Asked Questions (FAQs)

Search for the app to connect keeps failing.

1. Keep the boAt Crest app updated to the latest version.
2. Close all the programs on your device → Stop and restart Bluetooth and GPS → Connect again.
3. Check and enable the notification functions of your phone and keep the phone and watch in close contact.

Note: Make sure your phone system meets Android 7.0 and above and iOS 14.0 and above.

My watch is receiving no alerts, texts, or phone calls.

Make sure the notification centre of the connected device is displaying messages. Only then will your smartwatch also display those notifications. Also, ensure that the app is running in the background and the battery optimisation feature on the phone is disabled.

My Bluetooth keeps getting disconnected.

- Make sure there is not more than a 10m distance between the Bluetooth on the phone and the watch.
- There is no obstacle between the watch and the phone.
- Make sure the app is running in the background.

Which functions of Chrome Ivory need Bluetooth to work?

Bluetooth must be continuously enabled on both devices for these features to function reliably. Call & Text Notifications, Find My Phone, music control, camera control, weather forecast, and Bluetooth calling require the proper Bluetooth connectivity to work.

Will it be okay to take a bath wearing Chrome Ivory?

The IP68 water resistance will only work under the following conditions:

- (1) Maximum depth of water: 1.5 m
- (2) Maximum time for exposure to water: 10 minutes

The watch isn't suitable for hot baths, hot springs, saunas, snorkelling, diving, water skiing and other wading or deep-water activities with high-speed water flow.

SAFETY & PRODUCT INFORMATION

WEEE INFORMATION



This product is an electronic monitoring product and is not intended as a medical reference. We reserve the right to modify or improve any of the functions described in this manual without any prior notice. At the same time, we hold the right to continuously update the product content.

- This device and any electrical accessories are compliant with local applicable rules on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- **Feature Disclaimer:** Features may vary by product model. For detailed specifications, please refer to the product user manual.
- **Image Disclaimer:** Due to ongoing improvements, specifications are subject to change without prior notice. We continuously enhance our products to ensure the highest quality.

Battery

- Do not disassemble, bore or damage the battery.
- Do not disassemble the built in batteries of non-replaceable battery devices.
- Do not use sharp objects to remove the battery.

Health Warning

- If you are wearing a pacemaker or other implanted electronic devices, please consult your doctor before using the heart rate monitor of the watch.
- The optical heart rate sensor will glow green. If you suffer from epilepsy or are sensitive to blinking light sources, please consult your physician before wearing this device.
- The device tracks your daily activities through sensors. This data is intended to tell you about your daily activities such as steps, sleep, distance, heart rate and calories, but may not be completely accurate.
- The device accessories, heart rate sensor, oxygen level monitor, and other relevant data is designed for fitness and not for medical purposes. They are not applicable to the diagnosis, monitoring, treatment or prevention of any diseases or symptoms. The heart rate data is for reference only. We're not responsible for any deviation in data.
- Avoid wearing the watch too tightly. Make sure you keep your skin dry - the area that comes in contact with the watch. If symptoms such as redness or swelling appear on your skin, immediately stop using the watch and consult the doctor.

Things to keep in mind

- Sync data everyday days to avoid data loss.
- Water Resistance will not work for seawater, acidic and alkaline solutions, chemical reagents & other corrosive liquid. The damage or defects caused by misuse or improper use are not covered by the warranty.
- Sports modes support up to 6 hours of exercise at a time.
- Avoid wearing the watch too tight in daily use. Keep the parts of skin touching the watch dry.
- Keep your arm still while measuring data for accurate measurement.

Disclaimer

This product is an electronic monitoring product and is not intended as a medical reference. We reserve the right to modify or improve any of the functions described in this manual without any prior notice. At the same time, we hold the right to continuously update the product content.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT SUBSTITUTE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of toxic substances.

